



• Thank you for purchasing the XR-01S. Before installing, please read the instruction carefully and keep them for future reference.

## ⚠ Notice

- Please, follow the step-by-step instructions for proper installation. Any damages caused by faulty installation shall be imputed to the users.
- To avoid a short circuit, do not pull the wires when installing the unit. Do not break or modify the wires either.
- Do not disassemble or change any parts.
- Maintenance and repairs should be executed by our professionals only.

### ©MARK MEANING:

⚠ Some procedures must be followed to avoid faulty installation.

⚠ **WARNING!** Some procedures must be followed to avoid damages from occurring to yourself and to others.

⚠ **CAUTION!** Some procedures must be followed to avoid damages from occurring to the vehicle.

🔧 **READ CAREFULLY!** If any information remains unclear, after following the instructions, please seek professional assistance.



FLASH



LIGHT ON



PRESS THE  
BUTTON  
ONCE



PRESS THE  
BUTTON 3  
SECONDS

## 1-1 Accessories

<b>1</b> Meter X 1 	<b>2</b> Speed sensor X 1 	<b>3</b> D6 X 5L mm magnet X 6 	<b>4</b> M8 / S type speed sensor bracket X 1 
<b>5</b> M10 / S type speed sensor bracket X 1 	<b>6</b> M5 X 5L mm Hexagon screw X 2 	<b>7</b> Meter bracket X 1 	<b>8</b> M5 X 12L screw X 2 
<b>9</b> M4 X 10L screw X 2 	<b>10</b> M5 washer X 2 	<b>11</b> Mid-way connector X 10 	


**NOTE** Contact your local distributor, if the items received in the box are not the same as the items listed above.

## 1-2 Optional accessories

<b>1</b> Active speed sensor 	<b>2</b> Disc magnet screw <p>5/16-18 X 22.1L M5 X P0.8 X 12L M6 X P1.0 X 12.6L M6 X P1.0 X 19.7L M6 X P1.0 X 24L M8 X P1.25 X 22.5L M8 X P1.25 X 27.5L M8 X P1.25 X 29L M10 X P1.25 X 28.3L</p>	<b>3</b> L TYPE speed sensor bracket 	<b>4</b> Meter bracket 
<b>5</b> Meter bracket 			

**NOTE** Some of the optional accessories may not be available in your area. Contact your local distributor to obtain more information.

## 2-1 Wiring installation instructions

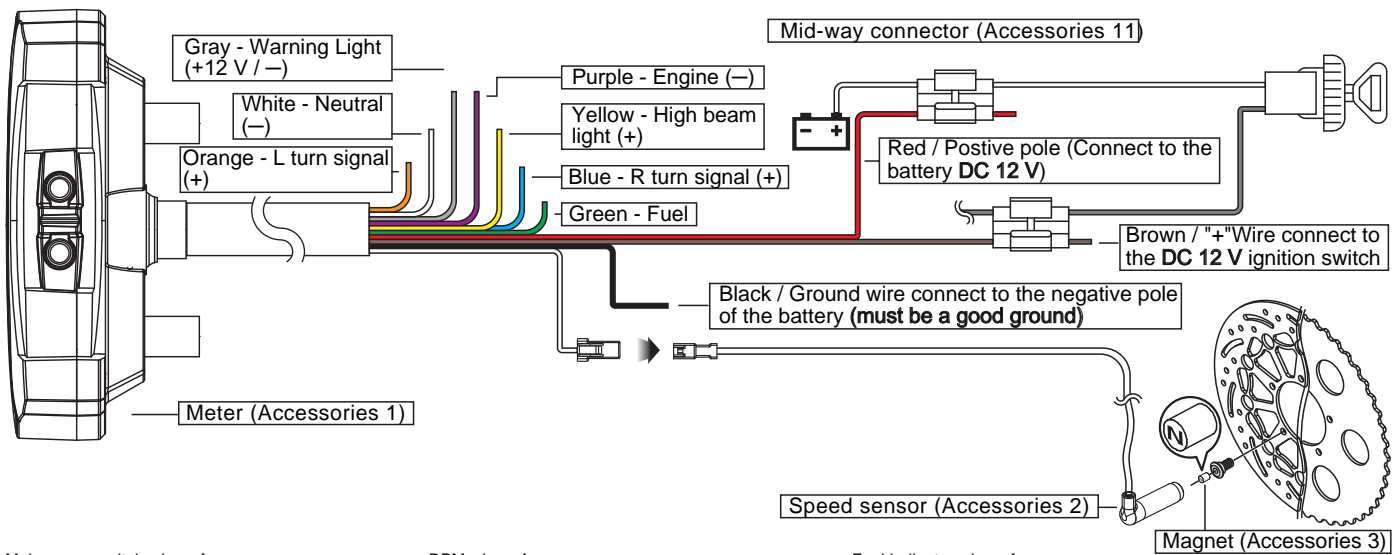

Main power switch wire reference:

	Power	Key on	Ground
YAMAHA	Red	Brown	Black
HONDA	Red	Red / Black	Green
SUZUKI		Black	Green
KAWASAKI	White	Brown	Black / Yellow
KYMC	Red	Black	Green
SYM	Red	Black	Green
PGO	Red / White	Orange	Black

**NOTE** The colors listed above may differ depending on the model and year of the vehicle.

RPM wire reference:

YAMAHA	Yellow / Black	BUELL	Pink
HONDA	Yellow / Green	CAGIVA	Gray / Green
SUZUKI	Yellow / Blue	DUCATI	Gray / Green
KAWASAKI	Light Blue	H-D	Pink
APRILIA	Gray / Violet	MV	Gray / Yellow
BMW	Black	TRIUMPH	Red
BENELLI	Gray / Violet		

**NOTE** The colors listed above may differ depending on the model and year of the vehicle.

Fuel indicator wire reference:


YAMAHA	Green	KYMC	Yellow / White
HONDA	Yellow / White	SYM	Yellow / White
SUZUKI	Yellow / White	PGO	Gray
KAWASAKI	Black / L Green		

**NOTE** The fuel sensor is electronic type, do not connect in parallel with the original wire - otherwise the fuel gauge won't display.  
**The wrong installation of the fuel wire might damage the instrument.**

**NOTE** N pole of the Magnet needs to be facing outward (facing the sensor) and must be installed on the brake disk or chain gear fixing bolt.

**NOTE** When connecting the power wire, follow the instructions carefully. If the red & brown wires are connected in parallel, the meter will not work properly.

## 2-2 Installation instructions

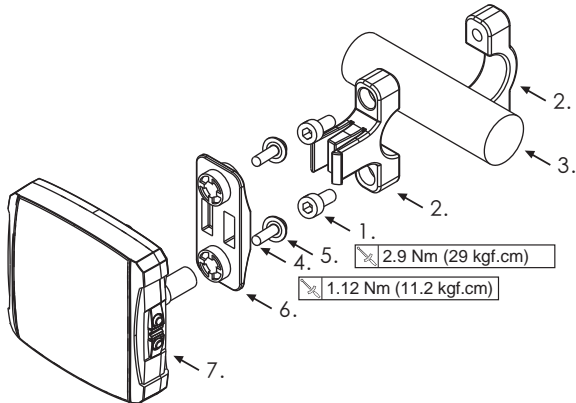


Follow the steps below during installation.

1. M5 X 12L screw X2 (Accessories 8) 2.9 Nm (29 kgf.cm)
2. Meter bracket (Accessories 7)
3. Fix the bracket on handle bar (7/8")
4. M4 X 10L screw X2 (Accessories 9) 1.12 Nm (11.2 kgf.cm)
5. M5 washer X2 (Accessories 10)
6. Meter bracket (Accessories 7)
7. Meter X1 (Accessories 1)

**NOTE** Adjust the meter to the proper angle before tightening the handle bar bracket screws.

## MOTO / SCOOTER Magnet installation instructions

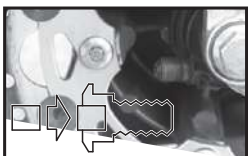

Put the magnet into the brake disc screw hole.



Install the S-type sensor bracket.



Adjust the sensor bracket position to make sure the sensor is facing the magnet to receive good speed signal.



Install the speed sensor on the bracket.




In order to get a good speed signal, the distance between the speed sensor and magnet should be under 8 mm.

P.S.



Higher number of magnets installed on the disk brake will result in a faster speed display on the gauge. The letter "N" on the magnets must face the speed sensor in order to pick up the speed correctly.

- EX 1: If the disk brake has 3 screws, you can install 1 or 3 magnets.  
EX 2: If the disk brake has 4 screws, you can install 1, 2 or 3 magnets.  
EX 3: If the disk brake has 5 screws, you can install 1 or 5 magnets.  
EX 4: If the disk brake has 6 screws, you can install 1, 2, 3 or 6 magnets.

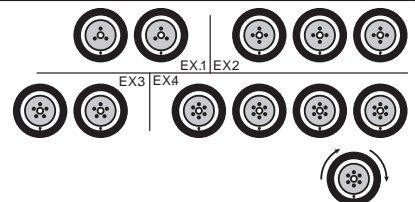

### 3-1 Basic function instructions

**Indicators lights** ●Turn Signal (Green) ◦ ◀▶ ●Neutral (Green) ◦ N ●Warning Light (Red) ◦ ▲  
●Engine Light (Yellow) ◦ ●High beam light (Blue) ◦

#### Odo meter

●Display range : 0 ~ 99,999 km (mile) , reset automatically after 99,999 km (mile)

●Setting unit : 1 km (mile)

#### Trip meter A 、B

●Display range : 0 ~ 9,999.9 km (mile) , reset automatically after 9,999.9 km (mile)

●Setting unit : 0.1 km (mile)

#### Hour meter

●Display range : 99,999 hour , reset automatically after 99,999 hour

●Display unit : 1 hour

#### Hour meter A 、B

●Display range : 9,999.9 hour , reset automatically after 9,999.9 hour

●Display unit : 0.1 hour

#### Fuel meter

●Display range : 6 levels

●Display unit : Each level represents 16.6 %

#### Clock

●24 H

#### Volt meter

●Display range : DC 8.0 ~ 18.0 V

#### Volt meter warning

●Display range : Flashing warning when voltage lower than 11.5 V or higher than 15.5 V

#### Select

#### Adjust

#### Speed record

●MAX speed record :

Display range : 0 ~ 360 km/h (0 ~ 225 MPH)



●Average speed record :

Display range : 0 ~ 360 km/h (0 ~ 225 MPH)

#### Speedometer

●Display range : 0 ~ 360 km/h (0 ~ 225 MPH)

●Display unit : km/h or MPH alternative

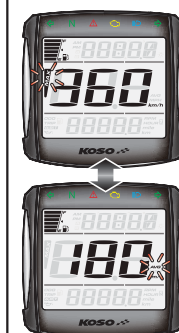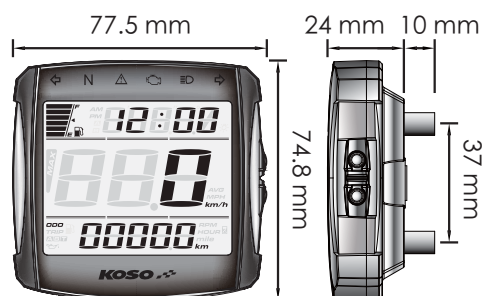

### 3-2 Function setting instructions

●Speedometer Display range : 0 ~ 360 km/h (0 ~ 225 MPH)  
Display unit : km/h or MPH for alternative

○Display internal < 0.5 second

○Odometer Display range : 0 ~ 99,999 km (mile) , reset automatically after 99,999 km (mile)  
Setting unit : 1 km (mile)

○Trip meter A 、B Display range : 0 ~ 9,999.9 km (mile) , reset automatically after 9,999.9 km (mile)  
Display unit : 0.1 km (mile)

○Oil maintenance mileage Setting range : 300 ~ 5,000 km (mile)  
Setting unit : per 100 km (mile)

○Hour meter Display range : 99,999 hour , reset automatically after 99,999 hour  
Display unit : 1 hour

○Hour meter A 、B Display range : 9,999.9 hour , reset automatically after 9,999.9 hour  
Display unit : 0.1 hour

○MAX speed record Display range : 0 ~ 360 km/h (0 ~ 225 MPH)

○Average speed record Display range : 0 ~ 360 km/h (0 ~ 225 MPH)

○Tire circumference

Setting range : 300 ~ 2,500 mm

Setting unit : 1 mm ; Sensitive point : 1 ~ 6

●Fuel meter

Display range : 6 grids

○Insufficient fuel warning

Setting unit : 100 Ω 、 250 Ω 、 510 Ω 、 USER

●Clock

24 H

●Volt meter

Display range : DC 8.0 ~ 18.0 V

○Volt meter warning

Display range : Flashing warning when voltage lower than 11.5 V or higher than 15.5 V

●Effective voltage

DC 12 V

●Effective temperature range

-10 ~ +60 °C

●Meter standard

JIS D 0203 S2

●Meter size

77.5 X 74.8 X 34 mm

●Meter weight

Around 87 g

●Indicator light color

Turn signal(Green) . Neutral (Green) .  
Warning Light (Red) . Engine Light (Yellow) .  
High beam light (Blue)

**NOTE** Design and specifications are subject to change without notice!

### 3-3 The main screens function switch instructions

#### ●Select button function instructions



●In the clock screen, Press the **Select** button one time to enter the volt screen.



●In the volt screen, Press the **Select** button one time to enter the clock screen.



- In the clock screen.

#### ● Adjust button function instruction



- In the ODO screen, Press the **Adjust button** one time to enter the Trip A screen.



- In the Trip A screen, Press the **Adjust button** one time to enter the Trip B screen.
- Press and hold the **Adjust button** for 3 seconds to reset Trip A record.

TRIP A 00000 km → 00000 km



- In the Trip B screen, Press the **Adjust button** one time to enter the oil maintenance mileage screen.
- Press and hold the **Adjust button** for 3 seconds to reset Trip B record.


TRIP B 00000 km → 00000 km



- In the oil maintenance mileage screen, Press the **Adjust button** one time to enter the hour meter screen.



- In the hour meter screen, Press the **Adjust button** one time to enter the hour meter A screen.

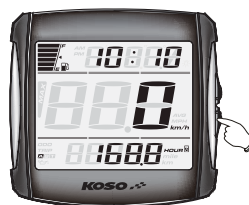

- In the hour meter A screen, Press the **Adjust button** one time to enter the hour meter B screen.
- Hold pressing **Adjust button** for 3 seconds to reset hour meter A records.

00000 km → 00000 km



- In the hour meter B screen, Press the **Adjust button** one time to enter the Speed record (MAX \ AVG) screen.
- Press and hold the **Adjust button** for 3 seconds to reset hour meter B records.

00000 km → 00000 km



- In the Speed record (MAX \ AVG) screen, Press the **Adjust button** one time to enter the ODO screen.

**NOTE** MAX Speed Record (MAX) and Average Speed Record (AVG) will switch between each other every 3 seconds.

MAX 000 km/h → AVG 000 km/h

- Press and hold the **Adjust button** for 3 seconds to reset MAX speed record.

MAX 000 km/h → MAX 000 km/h

- Press and hold the **Adjust button** for 3 seconds to reset Average speed record.

AVG 000 km/h → AVG 000 km/h



- In the ODO screen.

### 3-4 Oil maintenance mileage setting instructions

P.S.



- When the running distance reaches the maintenance distance setting. The oil indicator light will light up. The indicator light can be turned off after resetting the records.
- The oil mileage is counted by decreasing.



- Example : We already did the maintenance work after the oil light lit up.
- In the main screen, press **Adjust button** to enter Oil maintenance mileage screen.

⚠ The oil warning light is lit up now.

**NOTE** If you maintained the scooter before the oil light lit up, you could also reset the oil maintenance distance to remind yourself for the next maintenance time.





- In the oil maintenance mileage screen, Press the **Adjust button** for 3 seconds to enter the Maintenance Mileage "Reset" screen .



- Press the **Adjust button** for 3 seconds to confirm the Maintenance Mileage to be reset.
  - ⚠ In Maintenance Mileage Reset screen, press the Adjust button to give up the reset and then warning light will back to light on steady from flashing.
- NOTE** In Maintenance Mileage Reset screen, press the Adjust button to give up the reset and then warning light will back to light on steady from flashing.




- Maintenance Mileage "Reset" screen.
  - EX. The Maintenance Mileage to be reset from -1 to setting value.
- ⚠ The reset value will depend on the setting value according to 4-5 Maintenance Mileage Setting.

### 3-5 Setting screen instruction



- In main screen

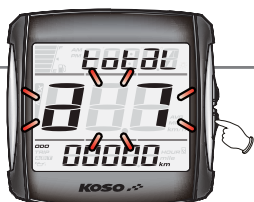

- Internal ODO display



- Odometer



- Oil maintenance mileage


- In main screen, press down the **Select & Adjust button** at the same time for 3 seconds to enter the setting screen.
- Press the **Adjust button** to select in following order start from Circumference and sensing point \ Fuel gauge resistance (Ω) \ Clock setting \ Backlight brightness setting \ Oil maintenance mileage \ Odometer \ Internal ODO display .

**NOTE** The screen will return to the main screen after 30 seconds if no button is press.


⚠ In any screen, you could hold down the **Select button** for 3 seconds to back to the main screen.



- Setting screen

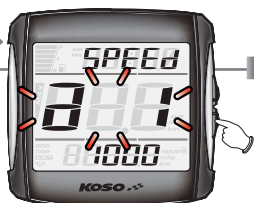

- Circumference and sensing point

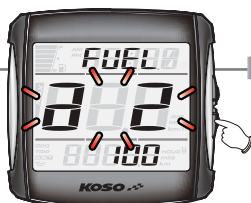

- Fuel gauge resistance



- Clock setting



- Backlight brightness setting

### 4 Entering setting screen



- In main screen, press down the **Select & Adjust button** for 3 seconds to enter the setting screen.



#### 4-1 Circumference and sensing point setting

- Press the **Select button** to enter the circumference and sensing point setting screen.
- ⚠ **CAUTION!**
- Measure the tire circumference (The tire you will install the sensor on) and make sure the number of magnet sensor point (You could install the magnet into the disc screw or the sprocket screw.)
- The speed displayed on the meter will be affected by the setting, make sure the setting number is correct before you make the setting.
- ⚠ **Reset this setting value when you change a different size tire.**





- **Example :** If the tire circumference is 1,300 mm.
- Press the **Select button** to the digit you want to set.
- EX. Now the tire circumference is setting from 1,000 mm.
- ⚠ Now the digit in thousands setting number is flashing!
- NOTE** Setting range : 300 ~ 2,500 mm  
Setting unit : 1 mm

P.S.



- You could define the valve as the starting point and the terminal point to measure the wheel circumference with a measuring tape.

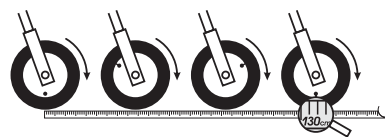


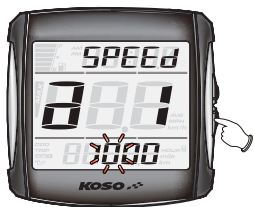

- Press the **Adjust button** to choose the setting number.




- Press the **Select button** to enter the sensor point setting.
- EX. The circumference setting is changed from 1,000 mm to 1,300 mm.

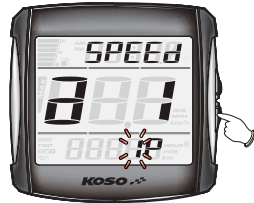


- **Example :** If the sensor point is setting 6P.
- Press the **Adjust button** to choose the setting number.
- EX. Now the sensor point is setting from 1P.

⚠ Now the setting value is flashing!

**NOTE** Sensitive point : 1 ~ 6

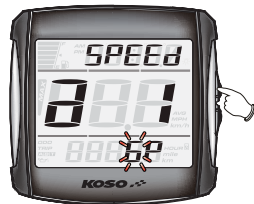


- Press the **Select button** to go back to the circumference and sensing point setting screen.
- EX. Now the sensor point is setting from 1P to 6P.

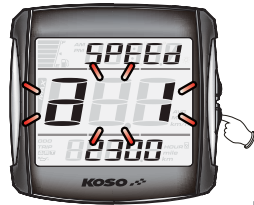


- Press the **Adjust button** to select the fuel gauge resistance setting screen.

## 4-2 Fuel gauge resistance settings

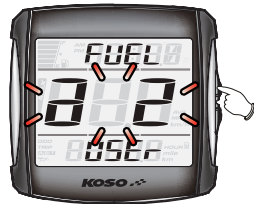

- Press the **Select button** to enter the circumference and sensing point setting screen.

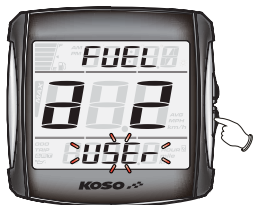


- **Example:** If the vehicle is a YAMAHA T-MAX 530; it's resistance is 100  $\Omega$  according to the service manual.
- Press the **Adjust button** to choose the setting number.

⚠ Now the setting value is flashing!

**NOTE** The fuel gauge resistance setting range : USER ~ 100  $\Omega$  ~ 250  $\Omega$  ~ 270  $\Omega$  ~ 510  $\Omega$  ~ 1200  $\Omega$  ~ SW (turn off)

**NOTE** Custom fuel level resistance:  
1) Manual - Please check 4-2-1 Fuel Level Resistance Manual Setting Instructions.  
2) Auto - Please check 4-2-2 Fuel Level Resistance Auto Setting Instructions.

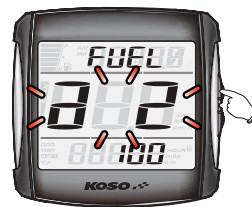

- Press the **Select button** to go back to the circumference and sensing point setting screen.
- EX. Now the circumference and sensing point setting from USER to 100  $\Omega$ .

## 4-2-1 Fuel Level Manual Setting



- Press the **Select button** to enter the lowest fuel level's resistance setting screen.
- **Example :** For YAMAHA T-MAX 530, according to the service manual, the fuel tank resistance from low to high is 90 - 100  $\Omega$  (the lowest) and 4 - 10  $\Omega$  (the highest). So enter the setting value as 10  $\Omega$ .

PS.



- You could find your fuel level sensor resistance range in the electronic components section in the service manual.
- Normally, we will recommend to choose the closest number set as the range to ensure that riders will not run out of gas before the fuel level indication. example, for YAMAHA T-MAX it's 90 - 100  $\Omega$  and 4 - 10  $\Omega$ , in which case we will suggest to use 90 - 10  $\Omega$  as the lowest and highest range.



- **Example :** If the lowest fuel level is 90  $\Omega$ .
- Press the **Select button** to the digit you want to set.


⚠ Now the setting value is flashing!



- Press the **Adjust button** to choose the setting number.




- Press the **Select button twice** to enter in the highest fuel level's resistance setting screen.
- EX. The lowest fuel level setting is changed from 0 to 90  $\Omega$ .

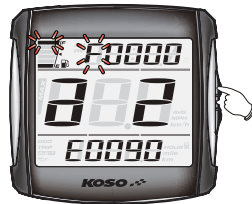

- **Example :** If the highest fuel level is 10  $\Omega$ .
- Press the **Select button** to the digit you want to set.

⚠ Now the setting value is flashing!

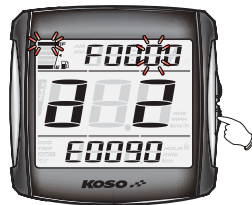

- Press the **Adjust button** to choose the setting number.



- Press the **Select button twice** to go back to the highest fuel level's resistance setting screen.
- EX. The highest fuel level setting is changed from 0 to 10 Ω.

#### 4-2-2 Fuel Level Resistance Auto Detection Settings



- Press the **Select button** to enter the lowest fuel level's resistance auto detection screen.

##### ⚠ CAUTION!


- Before detection, ensure that your current fuel level is in the lowest position that you would like to have.
- Stop the vehicle for a few seconds to allow the fuel surface to become steady, then start the detection of the resistance.

P.S.




- For example of YAMAHA T-MAX 530, if the fuel surface sensor float in the lowest position then it will detect the resistance around 90 - 100 Ω.

The lowest position

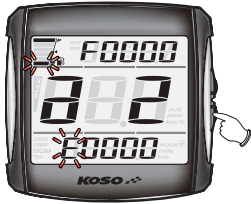

- Press the **Adjust button** to detect the lowest fuel level's resistance.

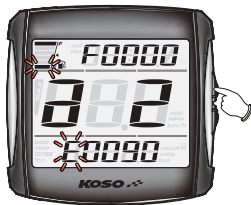

- Press the **Select button 5 times** to enter the lowest fuel level resistance auto detection screen.
- EX. Auto Detection the lowest fuel level resistance is 90 ohms.

##### ⚠ CAUTION!


- Before detection, please ensure your current fuel level is in the highest position that you would like to have.
- Stop the vehicle for a few seconds to allow the fuel surface become steady, then start the detection of the resistance.

P.S.



- For example the YAMAHA T-MAX 530; if the fuel surface sensor float is in the highest position then it will detect the resistance as around 4 - 10 Ω.


The highest position

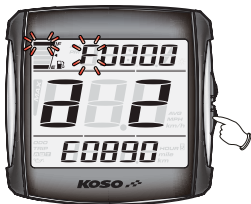

- Press the **Adjust button** to detect the highest fuel level resistance.




- Press the **Select button 5 times** to go back to the fuel gauge resistance.
- EX. Automatically detect the highest fuel level resistance value as 10 Ω.

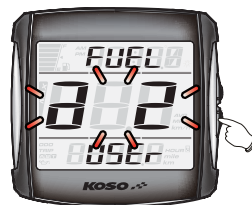


- Press the **Adjust button** to enter the Clock (Hr / Min) setting screen.

#### 4-3 Clock setting

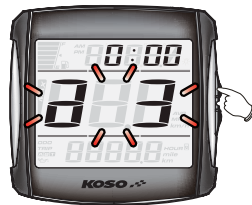

- Press the **Select button** to enter the Clock (Hr / Min) setting screen.

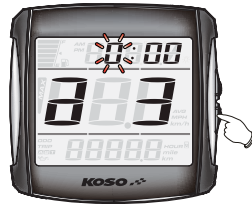

- Example : Changing the hour to 10.

- Press the **Adjust button** to choose the setting number.

⚠ Now the setting value is flashing!

**NOTE** Cursor moving order is : Hour > Digit in ten minutes > Digit in minutes

**NOTE** Setting range : 0 ~ 23 H.



- Press the **Select button** to enter the clock minutes setting screen.
- EX. Now the setting is changed from 0:00 to 10:00.




- Example : You want to change the minutes to 10.


- Press the **Select button** to the digit you want to set.

⚠ Now the setting value is flashing!


**NOTE** Setting range : 00 ~ 59 minutes.

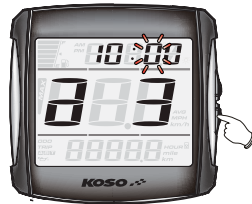

- Press the **Adjust button** to choose the setting number.

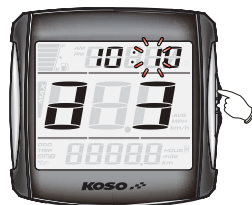


- Press the **Select button** to go back to the clock (Hr / Min) setting screen.
- EX. Now the setting is changed from 10:00 to 10:10.

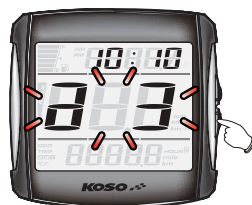

- Press the **Adjust button** to select the Backlight brightness setting.



#### 4-4 Backlight brightness settings

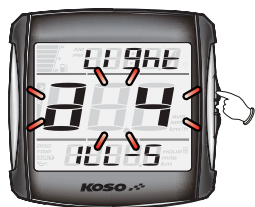

- Press the **Select** button to enter the backlight brightness setting screen.




- **Example :** You want to set the brightness at 60% (3).
- Press the **Adjust** button to choose the setting number.

⚠ Now the setting value is flashing!

**NOTE** Setting range :  
1 (Darkest) ~ 5 (Brightest), 5 different levels available.  
Setting unit : 20% per level.  
The backlight brightness will change immediately after you set the value.




- Press the **Select** button to go back to the backlight brightness setting screen.
- EX. The backlight brightness setting is changed from 5 (100%) to 3 (60%).

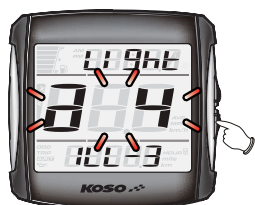

- Press the **Adjust** button to select the Oil maintenance mileage.

#### 4-5 Oil maintenance mileage settings

- Press the **Select** button to enter the Oil maintenance mileage setting screen.

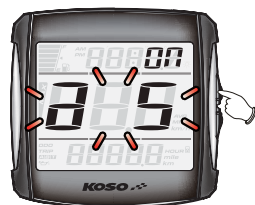

- **Example :** To activate the Maintenance Mileage Indication and set the warning value to 500 km.
- Press the **Select** button and notice the Maintenance Mileage Indication is activated.

**NOTE** If you don't want to use this function, then set it as "OFF". When you set "OFF", the Maintenance Mileage indication will not be shown.



- Press the **Select** button to the digit you want to set.

⚠ Now the setting value is flashing!

**NOTE** Setting range : 300 ~ 5,000 km (mile).  
Setting unit : 100 km (mile).

**NOTE** Cursor moving order is :  
from thousands digit to hundreds digit.

P.S.



- When the oil maintenance mileage returns to zero, the oil light will light up.
- The oil maintenance mileage is counting backwards.



- Press the **Adjust** button to choose the setting number.



- Press the **Select** button 3 times to go back to the Oil maintenance mileage screen.
- EX. The Oil maintenance mileage setting is changed from 300 to 500 km.



- Press the **Adjust** button to select the Odometer setting.

#### 4-6 Odometer settings

- Press the **Select** button to enter the Odometer setting screen.



- **Example :** To set Total Mileage (ODO) to 15,000km.
- Press the **Select** button to the digit you want to set.

⚠ Now the setting value is flashing!

**NOTE** Setting range : 0 ~ 99,999 km (mile).

**NOTE** Cursor moving order is : From ten thousands digit, thousands digit, hundreds digit, tens digit then to the units digit.



- Press the **Adjust** button to choose the setting number.






- Press the **Select button** to go back to the Internal ODO display screen.
- EX. The Odometer setting is changed from 0 to 15,000 km.



- Press the **Select button for 3 seconds** to go back to the main screen.
- EX. Internal ODO setting is 12,500 km.

#### 4-7 Internal ODO settings

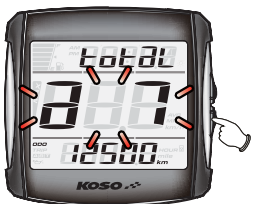

- Press the **Adjust button** to enter the Internal ODO screen.



- The main screen.

## 5 Trouble shooting

The following situation does not necessarily indicate malfunction of the meter. Check the following points, before taking it in for repairs.

Trouble	Check item	Trouble	Check item
The meter does not work when the power is on.	<ul style="list-style-type: none"> <li>● The meter has no power.               <ul style="list-style-type: none"> <li>→ Make sure the wiring is connected.</li> <li>The wiring and fuse are not broken.</li> <li>→ The battery is broken or the battery is too old to supply enough power (DC 12 V) to make the meter work.</li> </ul> </li> <li>● Check the voltage of your battery, and make sure the voltage is over DC 12 V.</li> <li>● Make sure the speed sensor is connected properly.               <ul style="list-style-type: none"> <li>→ Check if the speed sensor is connected and working properly. Also check whether the speed sensor cable is broken or loose.</li> </ul> </li> <li>● Check the tire-size setting.               <ul style="list-style-type: none"> <li>→ Refer to the manual 4-1 circumference and sensing point settings.</li> </ul> </li> </ul>	The odometer and trip meter are not accumulated or accumulated the wrong data.	<ul style="list-style-type: none"> <li>● It is possible that the permanent power wire is not connected properly.               <ul style="list-style-type: none"> <li>→ Check if the red positive wire is connect properly.</li> </ul> </li> </ul>
The meter shows the wrong information. Speed does not appear or appears incorrectly.		Fuel gauge does not appear or appears incorrectly.	<ul style="list-style-type: none"> <li>● Check your fuel tank.</li> <li>● Check the wiring harness.               <ul style="list-style-type: none"> <li>→ Is the wire connected properly?</li> </ul> </li> <li>● Check the tire-size setting.               <ul style="list-style-type: none"> <li>→ Refer to the manual 4-2 fuel gauge resistance settings.</li> </ul> </li> <li>● Did you connect the wires correctly?               <ul style="list-style-type: none"> <li>→ Check if the positive wire (Red) connected to the battery, and the main positive wire (Brown) connected to the main switch.</li> </ul> </li> </ul>
		The clock is incorrect.	

\* If the problem is not resolved after following the steps shown above, please contact your local distributor for assistance.